

POWERING DOWN SOLID STATE CONTROLLERS

- 1) Unplug controller from the outlet.
- 2) Open the face panel, remove and disconnect the battery.
- 3) Wait five minutes.
- 4) Plug the controller back into the outlet.
- 5) Re-install the battery in the controller.
- 6) Program the controller to the correct time and desired schedule.